

6 Install New Software

Refer to figure 4 for these instructions.

6.1 Install new software:

All dispensers: Remove the Computer board from the card cage. Replace U5 with a new U5 version ND.01.00.00 or newer. Replace the Computer board into the card cage.

Blenders only: Also remove the Blend Control board from the card cage. Replace U8 with a new U8 version NE.01.00.00 or newer. Replace the Blend Control board into the card cage.

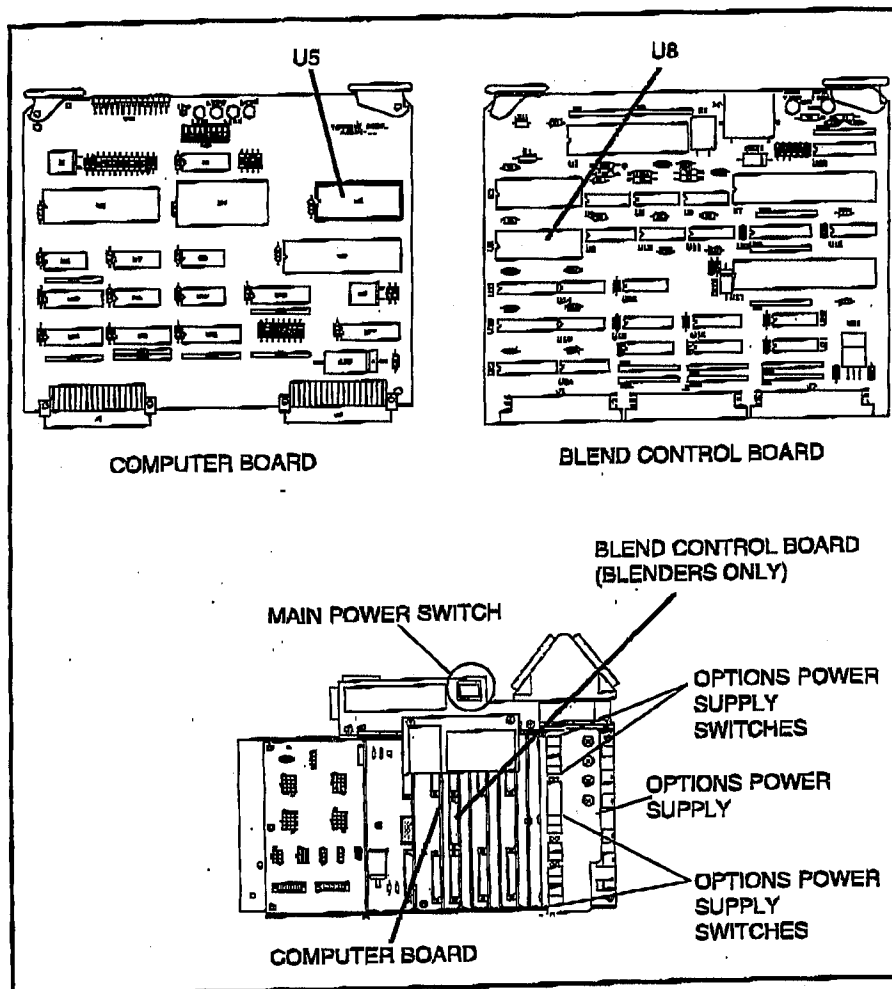


figure 4

7 Power Up Dispenser

7.1 Turn on the Main Power Switch on the card cage, accessed from Side A.

7.2 Turn on all applicable power switches on the Options Power Supply. See figure 4.

Note that some Options Power Supplies do not have all switches shown. Any switches not present are activated when the Main Power Switch is turned on.